



FN Shortcut Keys

- FN + “F1” = My PC
- FN + “F2” = Search
- FN + “F3” = Calculator
- FN + “F4” = Music
- FN + “F5” = Last song
- FN + “F6” = Next song
- FN + “F7” = Play/pause
- FN + “F8” = Stop
- FN + “F9” = Mute
- FN + “F10” = Volume-
- FN + “F11” = Volume+
- FN + “F12” = Lock Win
- FN + “INS” = Switching backlight effects
- FN + “↑ ↓” = Backlit Brightness+/-
- FN + “← →” = Backlit Speed+/-
- FN + “Win” = Lock win and APP
- FN + “W combination switching WSAD and ↑ ↓ ← →” = combination switching